


How To Change Combinations:

Master Built-in combination locks


1630 • 1631 • 1654 • 1655 • 1658 • 1659 • 1670 • 1671




NOTE: Please obtain from locker custodian the control key and chart showing combinations possible for each lock.

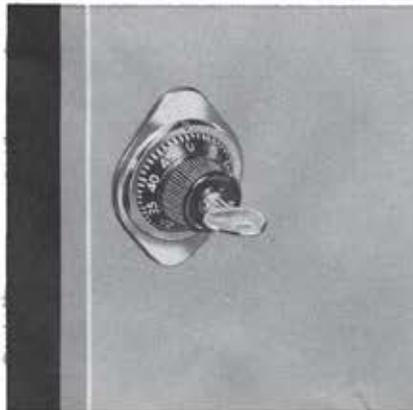


1 Insert control key and turn it right one-quarter turn to position as shown above. Open door.

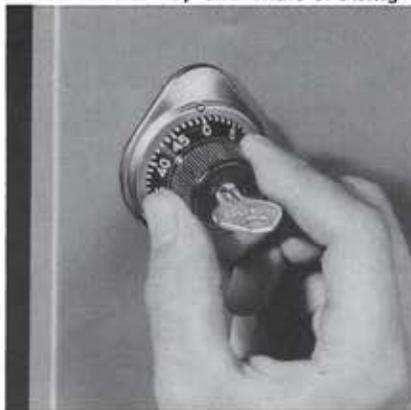

2 Revolve dial to the right at least one complete turn, stopping at zero (0).

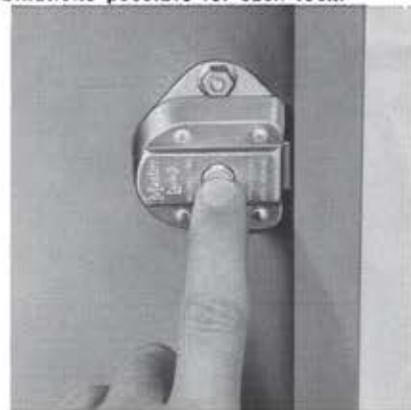

3 Depress push-button on back of lock case and hold in depressed position.

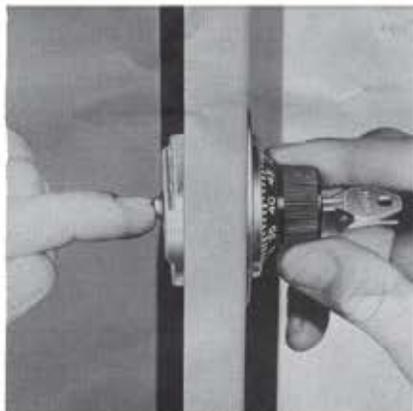

4 With other hand, turn dial right to number 48. Do not turn dial more than two numbers with button depressed. Then release push-button.



5 Turn dial to the right until you hear click. Then stop. The combination has now been changed.



6 Close locker door. Remove key by turning it one-quarter turn to left, back to original position.

7 Combination has now been changed automatically to next combination assigned. Dial the new combination (see chart for dialing numbers) to be certain that combination has been properly changed.

8 If a mistake was made in following above instructions, dial first combination (see chart). If it does not work, dial next combination, etc., until correct combination to open lock is reached.

9 IMPORTANT: Make sure combination change is reported to lock supervisor so records can be brought up to date.

Master Lock

2600 N. 32ND ST.

P.O. BOX 10367

MILWAUKEE, WI 53210-0367

414-444-2800

FAX 414-449-3114

Form No. 7000-0067 ©1994 Master Lock Co. All Rights Reserved. Printed in U.S.A. 9/94