

Model Retro-fit Markerboards Installation Instructions



ASSEMBLY:

Step 1. Measure your existing chalkboard, outside of frame edge to edge

Step 2. Fit Retro-fit markerboard to your existing chalkboard


Step 3. Screw into place, using self-drilling screws (Provided) Note: One screw every 18" recommended

Step 4. Finished


Step 5. Two piece boards require installation of a Cover Bar, simply peel and stick onto the adjoining frames for a seamless look.

PART NUMBER	HARDWARE
1	Retro-Fit Markerboard
2	Screw
3	Washer
4	Cover Bar


Step 1

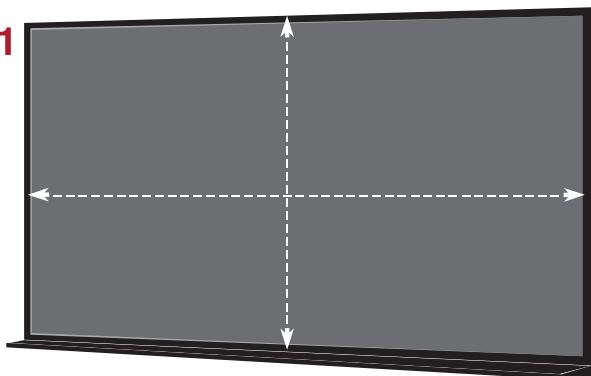


Step 2

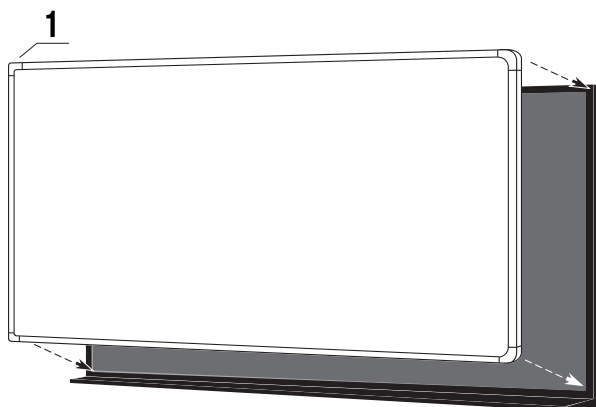

Step 3

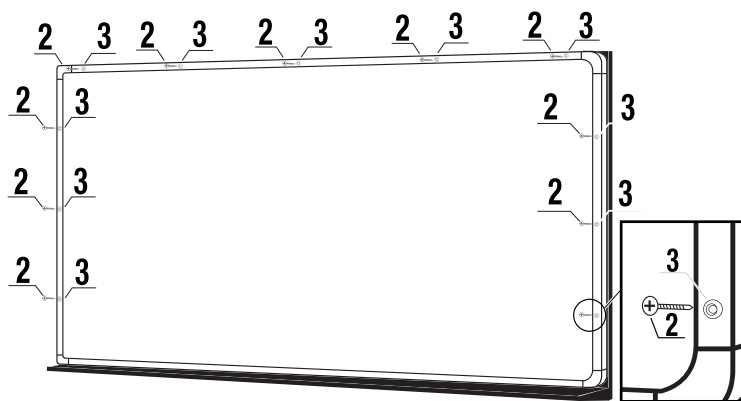

Step 4

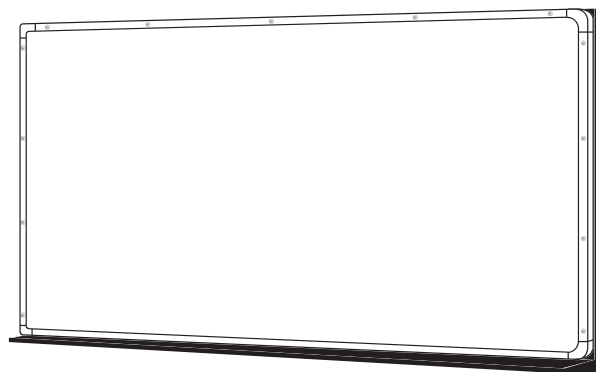

Step 5

Cover Bar Example

