Model 801JJ / 815JJ Installation Instructions




LOWER ASSEMBLY:

First assemble the shovel, strengthening beam and wheel frame to the main frame as shown in the picture, and insert the bolts and nuts in. Second, put the axle through the wheel frame and knock the roll pin's in. Then put the wheels on and insert the cotter pin with its rear open. Last, after adjustment, tighten up the screws.

UPPER ASSEMBLY:

Insert handle #13 to main frame and insert the screws right into the holes. Attach component #12 and tighten up the nuts. Then the assembly of the whole cart is finished.

PART NUMBER	HARDWARE	QUANTITY
1	Cotter Pin	x2
2	Wheel	x2
3	Washer	x4
4	Bolt	x8
5	Wheel Frame	x2
6	Strengthening Beam	x2
7	Main Frame	x1
8	Shovel	x1
9	Nut	x8
10	Axle	x1
11	Roll Pin	x2
12	Component	x2
13	Handle	x1

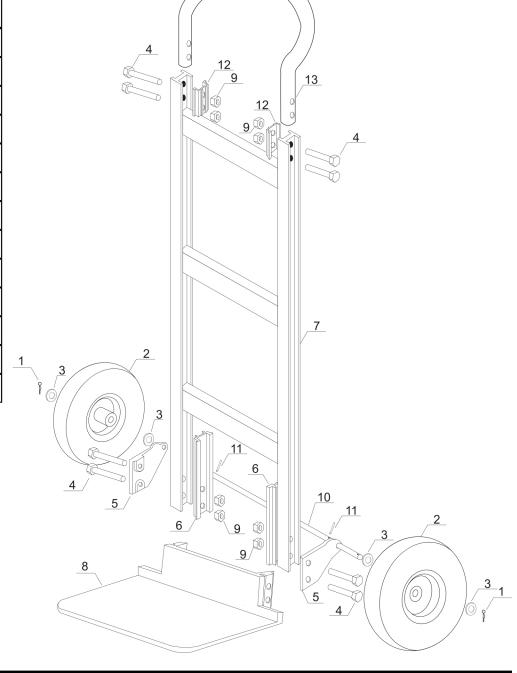

Phone: 800-930-6299 Fax: 800-964-4629 Email: help@SchoolFix.com